
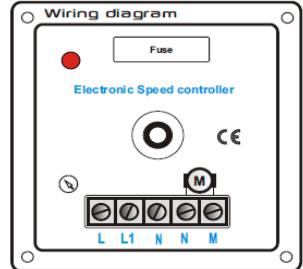
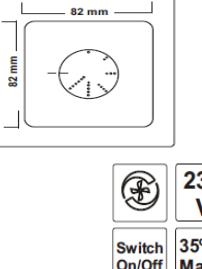
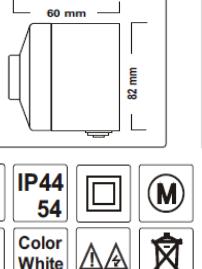
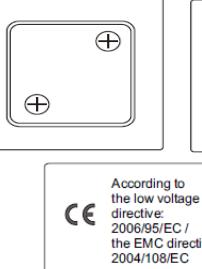


EN	Description	LT	Apašymas				
Electronic speed controllers VRE-L..			Elektroniniai greičio reguliatoriai VRE-L..				
<p>Electronic speed controllers VRE-L.. are based on the principle of phase angle control by means of triacs. They are applicable for speed adjustment of single phase voltage controllable asynchronous electric motors. The motors should be internally protected from overheating. Minimum speed can be adjusted using potentiometer.</p> <p>A number of different motors and fans can be controlled with one controller but maximum current can not be exceeded. These devices for continuous speed control one or more voltage-controlled single-phase motors/fans. They feature continuously running, low energy and quiet operation. Fast current and temperature fuses which complete user security. VRE-L..S models start work from 0 to 100% power. VRE-L..H models start work from 100 to 0% power.</p>			<p>Keisdami įtampą VRE-L.. elektroniniai reguliatoriai, keičia vienos fazės 230V variklių, ventiliatorų sukimosi greitį. Regulatoriai neturi apsaugos nuo perkaitimo pajungimo galimybės. Vieno regulatoriaus pagalba valdyti keletą variklių su salyga, kad suminė regulatorių srovė neviršytų regulatoriaus srovės.</p> <p>VRE-L.. reguliatoriai ant korpuso turi LED indikatorių, bei įsijungia/jišsijungia paspaudus valdymo rankenelę.</p> <p>VRE-L..S modelio regulatoriai pradeda darbą nuo 0% galingumo, didindami greitį iki 100%. VRE-L..H modelio regulatoriai pradeda darbą nuo 100% mažindami greitį iki 0%.</p>				
Technical data			Techniniai duomenys				
<ul style="list-style-type: none"> Control type: potentiometer Switch: On/Off push switch Minimum speed: internally adjusted 	<ul style="list-style-type: none"> Regulation: Soft start min. to max Hard start max. to min Indication: LED light 	<ul style="list-style-type: none"> Valdymas: potenciometras Jungimas: On/Off paspaudžiamas jungiklis Minimalus greitis: viduje reguliujamas 	<ul style="list-style-type: none"> Greičio regulavimas: „Soft start“ min. iki maks. „Hard start“ maks. iki min Indikacija: LED indikacija 				
Type	Voltage (V)	Current (A)	Weight (kg)	Tipas	Įtampa [V]	Srovė [A]	Svoris [kg]
VRE-L 1.0S/H	230	1.0	0.320	VRE-L 1.0S/H	230	1.0	0.320
VRE-L 1.5S/H	230	1.5	0.320	VRE-L 1.5S/H	230	1.5	0.320
VRE-L 2.0S/H	230	2.0	0.320	VRE-L 2.0S/H	230	2.0	0.320
VRE-L2.5S/H	230	2.5	0.320	VRE-L 2.5S/H	230	2.5	0.320
Installation and connection							
<p>Break mains voltage. The knob must be pulled out perpendicularly from the controller. Remove the nut and front plate to access the controller. Mount surface mounting case. Connect according to diagram. The controller should be wired in accordance with the wiring diagram supplied with the controller and markings on the terminals. Once all wiring to the controller has been completed, check that connections have been made to the correct terminals and that all connections are secure. Turn on mains voltage and controller. Adjust min. speed and turn off controller. Mount cover with nut to surface mounting case. Push knob in place at off position.</p>							
Service							
<p>Please check that: Right voltage is applied. If all connections are correct. The machine to be regulated is functioning. The fuse in the controller is OK</p>							
Fuse changing							
<p>Remove the knob, nut and cover. Change fuse. Put the details back in place. Use only recommended fuses 5x20mm, ceramic, fast acting F, with high breaking capacity H. Use of incorrect fuse will void warranty.</p>							
Maintenance							
<p>The controller needs no specific maintenance. The housing may be cleaned using a moist cloth. In case of heavy filthiness, clean with non-aggressive cleaners. Pay attention that no fluids gets into controller. Reconnect mains only after the controller is completely dry. All electrical connections should be carried out after supply voltage break by qualified and authorized electrician in accordance with national and the local regulations.</p>							
Warranty and Restrictions							
<p>The manufacturer warrants 2 year from delivery date against defect in manufacturing. Any modifications or alterations to the product annul the warranty!</p>							
Terminal block/Pajungimo gnybtų žymėjimas							
L	Supply voltage/Maitinimo įtampa 230V 50Hz						
L ₁	Not regulated output/Nereguliuojamas išėjimas 230V (e.g. For air damper actuators/pvz. oro sklenčių pavaroms)						
N	Supply neutral/Neutralė						
M	Regulated output/Reguliuojamas išėjimas						
							

Terminal block/Pajungimo gnybtų žymėjimas	
L	Supply voltage/Maitinimo įtampa 230V 50Hz
L ₁	Not regulated output/Nereguliuojamas išėjimas 230V (e.g. For air damper actuators/pvz. oro sklenčių pavaroms)
N	Supply neutral/Neutralė
M	Regulated output/Reguliuojamas išėjimas

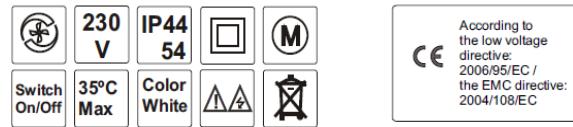